



KAHUNA
Powersports
www.kahunapowersports.com

ATV Periodic Maintenance Chart

In addition to the following items always perform the Daily Safety Checks

FREQUENCY	First Service	Regular Service			
	After 10 hrs or 100 km of use	Every 10 days or 200 km of use	Every 30 days or 600 km of use	Every 90 days of vehicle use, 1700 km, or when belt indicator light turns on (100 hours of use) whichever comes first	Every year of use
OPERATION					
ENGINE:					
Transmission drive belt wear - <i>inspect</i> *				D	
Transmission drive belt deflection - <i>inspect</i> *				D	
Drive belt failure detection system function - <i>inspect</i> *				D(Note)	
Engine brake control lever - <i>inspect</i> *				D	
<input type="radio"/> Air cleaner - <i>service</i> *	●	●			
<input type="radio"/> Throttle lever play - <i>inspect</i>	●	●			
<input type="radio"/> Valve clearance - <i>inspect</i> *	First 1 700 km; thereafter every 3 400 km				
Idle speed - <i>inspect</i>			D		
Engine oil - <i>change</i> *	●			●	
Oil filter - <i>replace</i> *	●			●	
<input type="radio"/> Spark plug - <i>clean and gap</i>	●			●	
Spark arrester - <i>clean</i>					●
Fuel hoses and connections - <i>inspect</i>				D	
Fuel hose - <i>replace</i>	4 years (D)				
Radiator - <i>clean</i> *	●	●			
Radiator hoses and connections - <i>inspect</i> *	D				D
Coolant - <i>change</i> *	2 years (D)				
CHASSIS:					
Joint boots - <i>inspect</i> *	●	●			
Rear brake pedal and lever adjustment - <i>inspect</i> *	●	●			
Rear brake plates - <i>change</i> *	Every 10 000 km (D)				
Brake hose - <i>replace</i>	4 years (D)				
Brake light switch - <i>inspect</i> *	●		●		
Front brake pad wear - <i>inspect</i> *	D		D		
Rear propeller shaft universal joint - <i>lubrication</i>				D	
Front brake fluid level - <i>inspect</i>	●		●		
Front brake fluid - <i>change</i>					D
Front brake hoses and connections - <i>inspect</i>				D	
Master cylinder piston assembly and dust seal - <i>replace</i>	2 years (D)				
Caliper piston seal and dust seal - <i>replace</i>	2 years (D)				
Differential control lever play - <i>inspect</i>	●	●			
Tire wear - <i>inspect</i> *			●		
Steering - <i>inspect</i>	D			D	
General lubrication *			●		
Bolts and nuts - <i>tighten</i>	●	●			
Front final gear case oil - <i>change</i>	●				●
Rear final gear case oil - <i>change</i>	●				●

CALL FOR BEST PRICE

● = Clean, adjust, lubricate, replace parts as necessary

D = Service to be performed by an authorized dealer or someone equally competent

○ = Emission related parts

* = Service more frequently when operated in mud, dust, or other harsh riding conditions, or when carrying heavy loads or pulling a trailer

NOTE

When the drive belt failure detection system is activated, return the vehicle immediately to an authorized dealer for drive belt inspection and adjustment or replacement

Synthetic Oil Extra